

## T2800 Overcurrent or Earth Fault Relay

- Protection of generators against earth faults or overcurrent
- Visual indication of power, pick-up and relay tripping
- Wide range of settings for current and delay, both in two steps.
- High precision digital countdown timer for delayed output
- Accepts high supply voltage variations: 60 110%
- Cost effective and highly reliable compact design
- 50 hours burn-in before final test
- Operating temperature range: -20°C to +70°C
- Flame retardant enclosure
- DIN rail or screw mounting

#### **Application**

The T2800 Overcurrent or Earth Fault Relay has a broad application as an earth fault or a single phase overcurrent detection relay. It has a wide setting range for protection, control and monitoring.

The T2800 is part of the SELCO T-Line series with modular units for protection, control and monitoring of generators.

#### **Function**


The T2800 detects the magnitude of the current and, if this exceeds the preset level (0.02 - 2 x  $\rm I_N$ ), the pick-up LED will indicate and the delay timer will be started.

After the preset time (0.1 - 10 sec.) has expired the output relay and the corresponding LED will be activated, provided that the current level was exceeded for the entire delay time.

The T2800 has a normally energized output relay. The relay is a latching relay which can be reset or disabled.

#### Installation

The supply voltage is connected to terminals 1 and 3 or terminals 2 and 3, according to the supply source. The T2800 is connected to the measuring current coming from the current transducer(s) secondary via terminals 5 and 6. See application diagram.

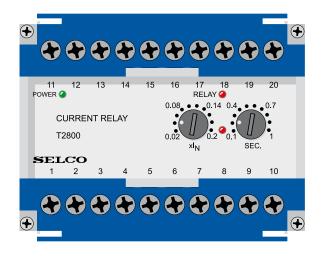

The latching of the output relays is reset or disabled by bridging terminals 15 and 16.

The current setting range  $(0.02 - 0.2 \times I_N)$  is multiplied by  $10 (0.2 - 2.0 \times I_N)$  by bridging terminals 18 and 19.

The delay setting range (0.1 - 1.0 sec.) is multiplied by 10 (1.0 - 10 sec.) by bridging terminals 12 and 13.

The current setting can be calculated according to the following example:

Overcurrent protection of a generator. Required trip level: 110% Generator rating: 695A Current transformer: 800/5ASetting:  $110 \times 695/800 = 96\% = 0.96 \times I_{N}$ 

#### **Troubleshooting**

- 1) If the relay is not operating please check that the power LED is on, ensuring that the supply is present.
- Measure the supply voltage which must be compatible with the information label on top of the enclosure.
- 3) Measure the current levels in erminals 5 and 6 and check that the current is above setting.

For example:  $0.08 \times I_N = 0.4A$ ;  $1 \times I_N = 5A$ 


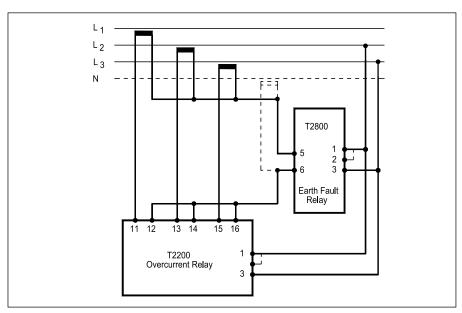


Fig. 1. Application. Earth fault detection and overcurrent detection using same transducers



# **Specifications**

### T2800 Overcurrent or Earth Fault Relay

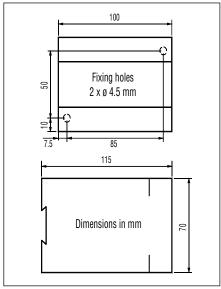

Dimensions.

#### **Type Approvals and Certificates**

The T2800 has been designed and tested for use in harsh environments. The unit is based on standard components, providing long term durability. The T2800 carries the CE label and has been approved by the following marine classification societies:



Bureau Veritas Russian Maritime Register of Shipping

Trip level	$0.02 - 0.2 \times I_{\text{N}}$ or $0.2 - 2 \times I_{\text{N}}$				
Delay	0.1 - 1.0 sec. or 1.0 - 10 sec.				
Max. voltage	660V				
Voltage range	60 - 110%				
Consumption	Voltage 5VA at U <sub>N</sub> Current 0.3VA at I <sub>N</sub>				
Continuous current	2 x I <sub>N</sub>				
Frequency range	45 - 400Hz				
Output relay	Normally energized, latching, resetable				
Contact rating	AC: 400V, 5A, 2000VA DC: 150V, 5A, 150W				
Overall accuracy	±5%				
Repeatability	±1%				
Operating temperature	-20°C to +70°C				
Dielectric test	2500V, 50Hz				
EMC	CE according to EN50081-1, EN50082-1, EN50081-2, EN50082-2				
Burn-in	50 hours before final test				
Enclosure material	Polycarbonate. Flame retardant				
Weight	0.5kg				
Dimensions	70 x 100 x 115mm (H x W x D)				
Dilliciisiolis					
Installation	35mm DIN rail or 4mm (3/16") screws				

The specifications are subject to change without notice.

#### **Type Selection Table**

Standard types:  $I_N = 5A$ 

Terminals

Туре	1-3	2-3	l <sub>N</sub>		
T2800-00	230V		5A		
T2800-01	450V	400V	5A		
T2800-02	127V	120V	5A		
T2800-04	24V DC+AC		5A		
T2800-05	480V	415V	5A		
T2800-08	230V		1A		

Other combinations and voltages are available on request.

Main office: SELCO A/S Betonvej 10 DK-4000 Roskilde Denmark

Phone: + 45 7026 1122 Fax: + 45 7026 2522 e-mail: selco.dk@selco.com

www.selco.com

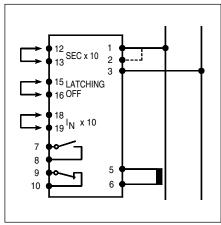


Fig. 2. Relay shown deenergized